

CONTENTS

BEFORE USING THE WASHING MACHINE

FIRST WASH CYCLE

**PRECAUTIONS AND GENERAL
RECOMMENDATIONS**

DESCRIPTION OF THE WASHING MACHINE

CHILD SAFETY (IF AVAILABLE)

PREPARATION OF THE WASHING

DETERGENTS AND ADDITIVES

WASHING PROGRAMME

REMOVING THE FILTER

DRAINING RESIDUAL WATER

CARE AND MAINTENANCE

TROUBLESHOOTING GUIDE

AFTER-SALES SERVICE

ACCESSORIES

TRANSPORT AND HANDLING

INSTALLATION

ELECTRICAL CONNECTION

BEFORE USING THE WASHING MACHINE

1. Removing the packaging and check

- After unpacking, make sure that the washing machine is undamaged. If in doubt, do not use the washing machine. Contact After-Sales Service or your local retailer.
- Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous.

2. Remove the transit bolts

- The appliance is fitted with transit bolts to prevent internal damage during transport.
Before using the washing machine you must remove the transit bolts (see "Installation/Remove the transit bolts").

3. Install the washing machine

- Remove the protective foil from the control panel (if available).
- Move the machine without carrying it at the top.
- Install the appliance on a solid and level floor surface, preferably in a corner of the room.
- Adjust the feet to ensure that the machine is stable and level (see "Installation/Adjust the feet").

4. Water supply

- Connect the water supply inlet hose in accordance with regulations of your local water company (see "Installation/Connect the water inlet hose").
- Water supply: cold water only
- Tap: 3/4" threaded hose connection
- Pressure: 100-1000 kPa (1-10 bar).

5. Drain hose

- Connect the drain hose to the siphon or hook it over the edge of a sink by means of the "U" bend (see "Installation/Connect the water drain hose").
- If the washing machine is connected to a built-in drainage system, ensure the latter is equipped with a vent to avoid simultaneous loading and draining of water (siphoning effect).

6. Electrical connections


- Electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions and current standard safety regulations.
- Voltage information, power consumption and electrical protection data are supplied on the inside of the appliance door.
- The appliance must be connected to the mains exclusively by means of a socket with an earth connection in accordance with established regulations. The appliance must be earthed by law. The manufacturer declines all liability for damage to property or injury to persons or animals deriving either directly or indirectly from failure to observe the directions.
- Do not use extension leads or multi sockets.
- Before any maintenance on the washing machine disconnect it from the mains supply.
- Access to the mains plug or to disconnection from mains supply via a double-pole switch must be ensured at all times following the installation.
- Do not operate the washing machine if it has been damaged during transport. Inform the After-Sales Service.
- Mains cable replacement is only to be carried out by After-Sales Service.
- The washing machine must only be used in the household for the prescribed uses.

Minimum housing dimensions:

Width:	600 mm
Height:	825 mm
Depth:	600 mm


FIRST WASH CYCLE

We recommend the first wash cycle be made without laundry.
This will remove any residual water used in testing your washing machine.

1. Turn on the tap.
2. Close the appliance door.
3. Pour a small amount of detergent (about 30 ml) into the detergent dispenser .
4. Select a short program (see programme chart).
5. Press the "On/Off" button.

PRECAUTIONS AND GENERAL RECOMMENDATIONS


1. Packing

- The packing box may be fully recycled as confirmed by the  recycling symbol. Adhere to local regulations when disposing of packaging material.

2. Energy saving tips

- Achieve the best use of energy, water, detergent and time by using the recommended maximum load size.
- Do not exceed the detergent dosages indicated in the manufacturer's instructions.
- The Eco Flap - a special system in the outlet - will prevent detergent loss from the drum to avoid detergent loss into the environment.
- Use "Prewash" for heavily soiled laundry only! Save detergent, time, water and energy consumption by not selecting "Prewash" for slight to normally soiled laundry.
- Pretreat stains with stain remover or soak dried in stains in water before washing to reduce the necessity of a hot wash program.
- Save energy by using a 60° C instead of a 90° C wash programme or a 40° C instead of a 60° C wash programme.
- Save energy and time by selecting a high spin speed to reduce the water content in laundry before using a tumble dryer (for machines with adjustable spin speed).

3. Disposing of packaging and old appliances

- This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The symbol  on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling

of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

- The washing machine is built from reusable materials. The washing machine must be disposed of in compliance with local waste disposal regulations.
- Before scrapping, cut off the power cable so that the washing machine cannot be connected to the mains.
- Remove detergent from compartment if you intend scrapping your appliance.


4. Child safety

- Children must not be allowed to play with the washing machine.

5. General recommendations


- When the appliance is not in use unplug it and turn off the tap.
- Before cleaning or carrying out maintenance, switch off the washing machine and disconnect it from the mains supply.
- To clean the outside of the washing machine, use a neutral detergent and a damp cloth.
- Do not use abrasive detergents.
- Do not attempt to force the door open.
- If necessary, the power cable may be replaced with an identical one obtained from our After-Sales Service. The power cable must only be replaced by a qualified technician.

6. EC Declaration of Conformity

- This washing machine has been designed, constructed and distributed in compliance with the safety requirements of EC Directives:
73/23/EEC Low Voltage Directive
89/336/EEC EMC Directive
93/68/EEC CE Marking Directive 

DESCRIPTION OF THE WASHING MACHINE

1. Worktop
2. Control panel
3. Detergent dispenser
4. After-Sales Service sticker (on the back side of the door)
5. Door
6. Door handle
 - To open the door press the button on the inside of the handle and pull
 - Close the door by pushing it firmly (the lock will click into place)
7. Child safety (inside door if available)
8. Filter (behind cover)
9. Plinth
10. Adjustable feet

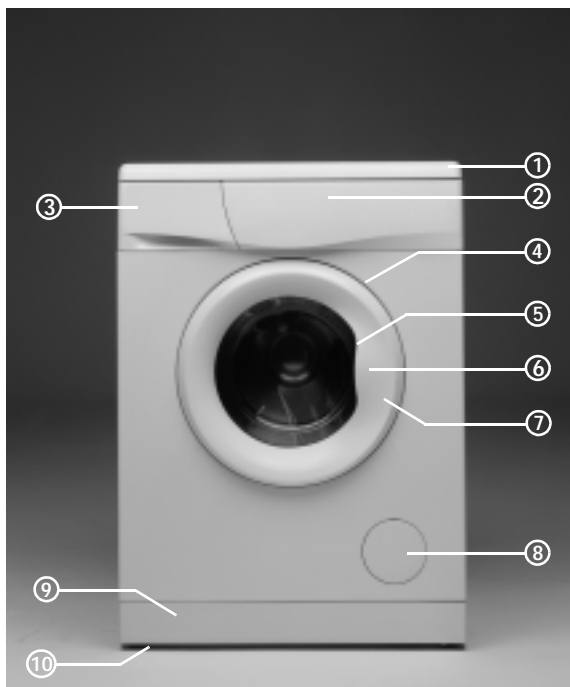

CHILD SAFETY (IF AVAILABLE)

To protect the appliance from improper use, turn the plastic screw on the interior of the door using a coin or the thick rounded plastic projection on the coloured insert from the detergent dispenser:

- Slot vertical: safety position, i.e. the door will not lock.
- Slot horizontal: normal position, i.e. the door can be locked again.

 


PREPARATION OF THE WASHING

1. Sort the laundry according to...

- **Type of fabric / care label symbol**
Cottons, mixed fibres, easy care/synthetics, wool, handwashed items
- **Colour**
Separate coloured and white items. Wash new coloured articles separately
- **Size**
Laundry items of different sizes distribute themselves better in the drum and optimise the washing and spinning action
- **Delicates**
Wash small items (e.g. nylon stockings, belts etc.) and items with hooks (e.g. bras) in a washbag or pillow case with a zip fastener. Always remove curtain glides or wash curtains with the glides inside a cotton bag
- **2. Empty all pockets**
Coins, safety pins etc. can damage the laundry, drum and tub.
- **3. Closures**
Close zips and hooks and eyes; Tie loose belts or straps together.

Stain removal

- Blood, milk, eggs etc. are generally removed by the automatic enzyme phase of the programme
- To remove red wine, coffee, tea, grass and fruit stains etc. add a stain remover to the detergent dispenser  chamber
- Pre-treat heavily-soiled areas with stain remover if necessary

Dyeing

- Only use dyes that are suitable for washing machines
- Follow the manufacturer's instructions.
- Plastic and rubber parts of the washing machine can be stained by dyes

Loading the laundry

1. Open the door.
2. Unfold the laundry and place it loosely in the drum. Observe the load sizes given in the Quick Reference Guide.
Note: overloading the machine will result in unsatisfactory washing results and creased laundry.
3. Close the door.

DETERGENTS AND ADDITIVES

The choice of detergent depends on:

- type of fabric (cottons, easy care/synthetics, delicate items, wool).
Note: Use only specific detergents for washing wool
- colour
- the wash temperature
- degree and type of soiling

Remarks:

Whitish residues on dark fabrics are caused by insoluble compounds used in modern phosphate-free powder detergents. If this occurs, shake or brush out the fabric or use liquid detergents.

Use only detergents and additives specifically produced for domestic washing machines.

When using descaling agents, dyes or bleaches for the pre-wash, make sure that they are suitable for use in domestic washing machines. Descaler could contain components which can attack parts of your washing machine

Do not use any solvents (e.g. turpentine, benzene). Do not wash fabrics in the machine which have been treated with solvents or flammable liquids.

Dosage

Follow the dosage recommendations on the detergent pack. They depend on:

- degree and type of soiling
- size of wash
full load follow the detergent manufacturer's instructions;
half load: 3/4 the amount used for a full load;
Minimum load (about 1 kg):
1/2 the amount used for a full load
- water hardness in your area (request information from the water company). Soft water requires less detergent than hard water (refer to water hardness table)

Notes:

Too much detergent can result in excess foam formation.

The cleaning effect deteriorates.

If the washing machine detects too much foam, it may prevent spinning.

Insufficient detergent may result in grey laundry in time and also calcifies the heating system, drum and hoses.

Water hardness chart

Water hardness	Characteristics	German °dH	French °fH	English °eH
1	soft	0-7	0-12	0-9
2	medium	7-14	12-25	9-17
3	hard	14-21	25-37	17-26
4	very hard	over 21	over 37	over 26

Pouring in the detergents and additives


The dispenser has three (models "A1" or "A2") chambers depending on model.

Chamber

- Detergent for the prewash

Chamber



- Detergent for the main wash
- Stain remover
- Water softener (water hardness 4)

When using liquid detergent, remove the coloured insert from the detergent container and insert it in the first gap in chamber . The scale on the insert makes dosing easier.


 
Chamber

- Fabric Softener
- Liquid starch

Only pour additives in up to the "Max" mark.

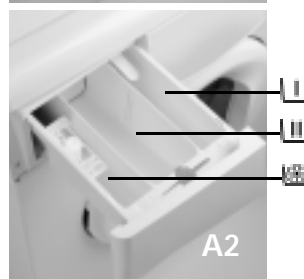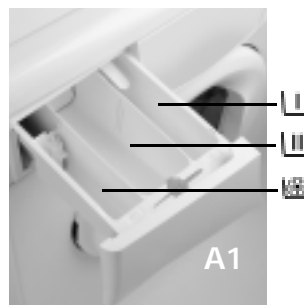

Notes:

- Keep detergents and additives in a safe, dry place out of the reach of children.
 - Liquid detergents can be used for programmes with prewash. In this case only measure in a powder detergent for the main wash.
 - To prevent dispensing problems when using highly concentrated powder and liquid detergents, use the special detergent ball or bag supplied with the detergent and place it directly inside the drum.
 - When using descaling agents, bleaches or dyes, make sure that they are suitable for washing machines. Descalers could contain components that can attack parts of your washing machine.
 - Do not use any solvents in the washing machine (e. g. turpentine, benzene).
 - If you use starch powder, proceed as follows:
 1. Wash your laundry using the desired wash programme.
 2. Then stir the starch in with water in a beaker.
 3. Select the "Rinse and Spin" programme, reduce the speed to 800 rpm and start the programme.
 4. Pull out the detergent drawer until you can see about 3 cm. of chamber .
 5. Pour the starch solution into chamber  while the water is running into the detergent drawer.
 6. If there are starch residues in the detergent drawer when the programme has finished, clean it if necessary (see "Cleaning and Maintenance").
- Take note also of the starch manufacturer's information.

WASHING PROGRAMME

Selecting the programme:

1. Plug in the appliance.
2. Turn on the water supply tap.
3. Set the **Programme Selector** knob to the desired programme.
4. Depending on model, set the **Temperature Selector** knob to the desired temperature.
5. Depending on model, set the **Spin Speed Selector** knob to the desired spin speed.
6. Select **additional options**, if desired, pressing the corresponding button.
By a **further pressing** of the button this option can be turned off again.
7. Check that the door is well closed. Press the **"On/Off"** button. The indicator light will come on.
For models fitted with "Start delay", programme starts after some seconds: during these seconds you can select delay time.

During the selected washing programme the programme selector knob moves by steps clockwise through the phases *prewash, main wash, rinse and spin*. Each step takes from some seconds to several minutes.

Options (depending on model)

- | | |
|--------------------------------|---|
| Easy Ironing | <ul style="list-style-type: none"> • Can be used together with Cotton and Synthetics programmes to make ironing easier. • Increases the water quantity and the clothes are spun very gently. |
| Energy save / Eco | <ul style="list-style-type: none"> • The duration of the wash is extended and the temperature reduced to save energy maintaining good washing results. |
| Quick wash / Rapid | <ul style="list-style-type: none"> • Select for quick, economical washes. • Especially suitable for small, lightly soiled loads. |
| Intensive rinse | <ul style="list-style-type: none"> • More water and a longer time in rinse cycle is added. • The intensive rinse function is especially suitable for areas with particularly soft water, for baby clothes and to help people with allergies. |
| Rinse hold / Spin delay | <ul style="list-style-type: none"> • The laundry remains in the last rinse water without being spun, to avoid heavy creasing and to prevent colours from changing. • Especially suitable for the "Synthetics" or "Delicates" programmes, if the laundry is not to be unloaded immediately after the end of the programme. • This function is particularly useful if you want to postpone spinning to a later time or when you do not wish to spin the clothes. <p>Continuing wash cycle after rinse hold:</p> <ul style="list-style-type: none"> • Press the Rinse hold button again; the load will be spun according to the selected programme. <p>If you do not wish to spin the clothes, turn the programme selector knob to the drain.</p> |
| Spin speed reduction | <ul style="list-style-type: none"> • Press this button to reduce the predetermined automatic maximum spin speed. In some programmes the maximum final spin speed is limited to go easy on your laundry items. Selection of a higher spin speed is not possible. |
| No spin | <ul style="list-style-type: none"> • Press this button to exclude the spin function from the programme. <p>Note: If "No spin" is selected:</p> <ul style="list-style-type: none"> • the "Wool" and "Delicates" programme do not run a spin cycle. • the "Cotton" and "Synthetics" programmes run a reduced spin speed cycle between rinses to ensure effective rinsing. • if the spin speed "0" is selected, the final spinning is cancelled. The water is drained out only. |
| Half Load | <ul style="list-style-type: none"> • reduces water consumption, above all during rinsing. • suitable for lightly-soiled laundry and small loads (max 3 kg). <p>Note: Reduce the detergent quantity.</p> |
| Cold Wash | <ul style="list-style-type: none"> • With this option water is heated only up to 20° C. |

Start delay (depending on model)

1. Select the programme and temperature, any additional options and the spin speed.
2. Press the **"On/Off"** button. The display flashes "0" for 6 seconds.
3. During these 6 seconds press the **"Start Delay"** button and select delay time: 0,3,6,9 hours.
4. The programme will start at the desired time, or after 6 seconds if "0" is selected.
 - To change the start delay: press the **"Start Delay"** button to select time.
 - To cancel the start delay: press the **"Start Delay"** button until "0" appears: the selected programme will then start.
 - If options are changed during the delay time period: the programme will start with newly selected options.
 - If the programme is changed during the delay time period: **"Start Delay"** will switch automatically to "0". Reselect the Start Delay time to activate.

N.B. With liquid detergent, a dosing aid placed directly in the drum should be used if a start delay has been selected.

Door lock

The door locks automatically after the programme start until the end of the programme.

If the programme selector is moved to the **"Stop"** position or if the electricity supply is interrupted, then after approximately one minute the door is released.

In this case do not open the door, because hot water could be released from the appliance.

Programme end

The programme selector knob is at the stop position.

1. Press the **"On/Off"** button. The indicator light turns off.
2. Cancel the special options by pressing the appropriate buttons.
3. Turn the water supply tap off.
4. Wait for the door to unlock (about one minute).
5. Open the door and unload the machine.

N.B. Do not fully close the door but leave it ajar to allow the drum to dry out.

Changing programme

1. Press the **"On/Off"** button. The indicator lights turns off.
 2. Select the new programme.
 3. Press the **"On/Off"** button. The new program will re-start.
- For this programme do not add any further detergent.

Changing options

The options can be selected or deselected without switching off the appliance.

Programme interruption or pause

To interrupt the running programme for a certain period and continue it at a later time:

1. Press the **"On/Off"** button.
2. Following the desired pause press the **"On/Off"** button once again.

Cancelling the programme

If the current programme is to be terminated prematurely and cancelled, the water must be pumped out first before the door can be opened:

1. Press the **"On/Off"** button to switch off the appliance.
2. Set the programme selector to programme setting **"Drain"**.
3. Press the **"On/Off"** button in order to start the **"Drain"** programme.

REMOVING THE FILTER

We recommend that you check and clean the filter regularly, at least two or three times a year.

Especially:

- When the appliance does not drain or spin properly
- If the pump is blocked by a foreign body (e.g. buttons, coins or safety pins)

IMPORTANT: make sure the water has had time to cool before draining the appliance.

1. Switch off the appliance and unplug it.
2. Open the filter cover with the help of the coloured insert from the detergent container.
3. Place a container beneath it.
4. Open the filter but do not withdraw it completely. Slowly turn the handle anticlockwise until the water drains out.
5. Wait until all the water has drained off.
6. Now unscrew the filter completely and remove it.
7. Clean the filter and the filter chamber.
8. Check that the pump rotor moves freely.
9. Insert the filter with the guide pin upwards and screw it in clockwise to the stop (handle horizontal).
10. Pour about 1 litre of water into the detergent drawer to reactivate the Eco system. Check that the foreign body trap is seated properly and tightly in place.
11. Fold the cover up and lock it.
12. Reinsert the plug in the socket.
13. Select a programme and start it.



DRAINING RESIDUAL WATER

Before emptying the residual water, switch the appliance off and unplug it from the mains socket.

Open the cover to the foreign body trap. Open the filter cover with the help of the coloured insert from the detergent container. Place a container beneath it.

1. Open the filter but do not withdraw it completely. Slowly turn the handle anticlockwise until the water drains out.
2. Wait until all the water has drained off.
3. Now unscrew the filter completely and remove it.
4. Tilt the appliance forwards carefully to allow the water to flow out.
5. Insert the filter with the guide pin upwards and screw it in clockwise to the stop (handle horizontal).
6. Fold the cover up and lock it.

Before using the washing machine again:

1. Pour approx. 1 litre of water into the detergent drawer to reactivate the Eco system.
2. Reinsert the plug in the socket.

CARE AND MAINTENANCE

Appliance exterior and control panel

- Can be washed down with a soft, damp cloth
- A little neutral cleaner (not abrasive) can be used
- Dry with a soft cloth

Door seal


- Clean with a damp cloth when necessary
- Check the seal folds for foreign bodies periodically

Filter


- We recommend that you check and clean the filter regularly, at least two or three times a year see "Removing The Filter")

Detergent dispenser

1. Press the release lever in the prewash compartment downward and remove the drawer.
2. Remove the inserts (the siphon from the softener compartment and the coloured insert for liquid detergents).
3. Wash all the parts under running water.
4. Replace the parts and refit the detergent dispenser. Insert the detergent dispenser in the washing machine.

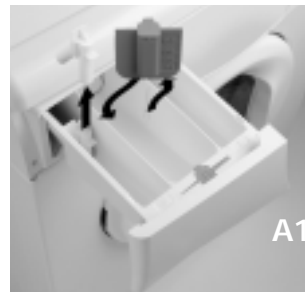

A1

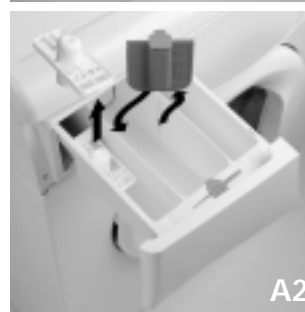

A2

Water hose mesh filter.

Check and clean periodically.

For machines with a straight water supply hose "A"

1. Turn off the tap
2. Unscrew the hose from the tap.
3. Clean the internal filter.
4. Screw the supply hose back onto the tap.
5. Unscrew the hose from the machine
6. Remove the filter from the washing machine with pliers and clean it.
7. Replace the filter and screw the hose connection back on the machine.
8. Turn on the tap and ensure that the connections are completely water-tight.

For machines with Water Stop hose "B" (depending on the model)

1. Turn off the tap
2. Unscrew the Water Stop hose from the tap.
3. Clean the internal filter.
4. Screw the Water Stop hose back onto the tap.
5. Turn on the tap and ensure that the connections are completely water-tight.



A



B

TROUBLESHOOTING GUIDE

The appliance will not start, no lamp lights up.

Check whether:

- the appliance is plugged in;
- the wall socket is functioning correctly (use a table lamp or similar).
- "On/Off" button pressed.

The appliance will not start, but the "On/Off" lamp is on.

Check whether:

- the appliance door is properly closed (child safety);
- a programme has been selected and the programme is started;
- the water tap is open. If not, open the tap and switch the appliance first off, then on.

The appliance stops during the programme.

Check whether:

- the "Rinse Hold" button is pushed, terminate this option by pressing the button again;
- "On/Off" lamp is off. Press "On/Off" button;

No water or insufficient water supply.

Check whether:

- the tap is turned on completely;
- kinks are present in water hose;
- the water hose filter is blocked;
- the water hose is frozen up;

N.B: Afterwards switch the appliance off, then on.

Waste water not pumped out.

Check whether:

- the drain hose is correctly installed (see "Installation Instructions");
- the filter is blocked.
- the drain hose is frozen up.
- the "Rinse hold" button is pressed.

Detergent and additive product residues in dispenser at end of wash.

Check whether:

- the siphon is correctly installed and clean (see "Care and Maintenance");
- enough water is being supplied. The mesh filters between the inlet hose and the tap could be clogged (see "Care and Maintenance"). Check and clean the filter two or three times a year (see "Removing the filter").

Also see "Detergent and Additives" for information.

The appliance vibrates during the spin cycle.

Check whether:

- the appliance is levelled and solidly installed on all four feet (see "Installation Instructions");
- the transit bolts have been removed. The transit bolts must be removed before the appliance can be used (see "Installation Instructions").

Water Stop fault (depending on model)

When the appliance detects a water leakage the pump runs continuously.

Switch off the appliance, unplug it and make sure that the water tap is closed.

The "Water Stop" may have been triggered by:

1. too much foam;
2. leakage in the inlet hose or in the appliance.

Tilt the appliance forwards carefully to allow the collected water to flow out from the bottom of the appliance. Then:

1. connect the appliance to the electrical outlet,
2. open the tap,
3. reselect the desired programme and press the "On/Off" button.

Important: if the fault occurs again, call After-Sales Service with details about the fault (see "After-Sales Service").

Final spin results are poor:

The appliance has an imbalance detection and correction system. If individual heavy articles are loaded (bathmat, bathrobe, etc.) this system may reduce the spin speed automatically to protect the appliance or even interrupt the spin cycle altogether, if the imbalance is too great even after several spin starts.

- if the laundry is still too wet at the end of the cycle, add smaller articles of laundry to balance the load and repeat the spin cycle.
- excessive foam formation may prevent spinning. Ensure correct amount of detergent is used

Important: this machine is fitted with a safety system. The programme is interrupted after a few minutes if one of the following happens:

- no water supply;
- pump blocked.

If the pump is blocked, switch off the appliance and clean the pump (see "Removing the filter"). Then re-start the appliance.

AFTER-SALES SERVICE

Before contacting After-Sales Service:

1. Try to remedy the problem yourself (see "Troubleshooting Guide").
2. Restart the programme to check whether the problem has solved itself.
3. If the machine continues to function incorrectly, call After-Sales Service.

Specify:

- The nature of the problem.
- The exact model of the appliance.
- The service code (number after the word SERVICE).

SERVICE 0000 000 00000



The After-Sales Service sticker is on the inside of the door.

- Your full address.
- Your telephone number and area code. After-Sales Service phone numbers and addresses are given on the guarantee card. Alternatively, consult the dealer where you purchased the appliance.

ACCESSORIES

Via our After Sales Service or your specialist dealer, you can obtain

- a **Pedestal Drawer** which can be installed beneath your washing machine. It raises your machine to allow for more comfortable loading and unloading, as you now no longer need to bend as far to access the unit. Furthermore, it offers a great space-management tool and storage solution.
- a **Stacking Kit** by means of which you can fix your dryer on top of your washing machine and thus effectively save space.

Some models are able to be installed under your kitchen worktop; in that case, please contact our After Sales Service (see above). Be aware that

- the appliance **MUST** be installed under a continuous worktop
- according to the legal safety regulations, the installation of the appliance **MUST** be carried out by an authorized technician or by our After Sales Service
- the appliance **MUST** be installed using the intermediate cover panel of the **UBS Base Set** which can be obtained from specialist dealers or our After Sales Service

TRANSPORT AND HANDLING

Never move the appliance by carrying by the worktop.

1. Unplug the appliance.
2. Turn off the tap.
3. Remove the water supply and drain hose.
4. Eliminate all water from the hoses and from the appliance (see "Removing the Filter", "Draining Residual Water").
5. Fit the transit bolts (obligatory) (see "Installation Instructions").

INSTALLATION

Remove the transit bolts

1. Slacken the four bolts with the spanner supplied.
 2. Unscrew the bolts by hand.
 3. Holding the bolt head, pull each bolt through the wide part of the holes.
 4. Close the holes with the plastic covers supplied; insert the covers in the wide part of the hole and slide them toward the narrow part until they click into place.
 5. Keep the transit bolts for future use.
 - Whenever the appliance is transported, the transit bolts must be refitted:
1. Pry off the plastic covers with a screwdriver, slide them in the opposite direction of the arrow and remove.
 2. Insert the transit bolts, performing the steps for removal in reverse order.



Adjust the feet

If the floor is uneven, adjust the levelling feet as required (do not insert pieces of wood etc. under the feet):

1. Slacken the locknut using the spanner supplied.
2. Adjust the height of the foot, turning it by hand.
3. Tighten the locknut by turning it anti-clockwise towards the appliance casing.

If the appliance is to be installed on a wooden floor, distribute the weight by placing it on a 60 x 60 cm sheet of plywood at least 3 cm in thickness. Secure the plywood sheet to the floor.



Worktop for built-under models

The appliance **must** only be installed beneath a continuous fitted kitchen worktop.

If the appliance will be built under **it is mandatory** to use the cover panel UBS. This can be obtained from specialist shops or from After-Sales Service.

1. Unplug the appliance.
2. Unscrew the worktop fixing screws from the rear of the appliance.
3. Slide the worktop fully backward and lift it upwards to remove. Install the cover panel following the relative instructions.
4. Refit the fixing screws and tighten them.
5. Plug the appliance only into the mains power socket.

Connect the water inlet hose

For models with straight hose "A"

1. Insert the dirt strainer (already premounted on the hose end or included in the accessories) into the threaded tap coupling.
2. Carefully screw the hose connection onto the tap preferably by hand.
3. Make sure there are no kinks in the hose.
4. Check water-tightness of tap and appliance connections by turning the tap completely on.

If the hose is too short, replace it with a suitable length of pressure resistant hose (1000 kPa min, EN 50084 approved type).

Periodically check the hose for brittleness and cracks and replace if necessary.

The appliance can be connected without an anti-backpressure valve.

For models with Water Stop hose "B"


If the flexible hose is damaged, unplug the appliance from the mains immediately.

1. Screw the threaded connector with the filter inserted onto the tap.
2. Check water-tightness of tap and appliance connections by turning the tap completely on.

If the hose is too short, replace it with a 3 m Water Stop hose (available from After-Sales Service or from your dealer). This operation must be carried out exclusively by a licensed electrician.

The appliance **must not** be connected to the mixing tap of a non-pressurized water heater.

The inlet hose and the plastic enclosure at the tap connection contain electrical components. **Do not cut the hose and do not immerse the plastic enclosure in water.**

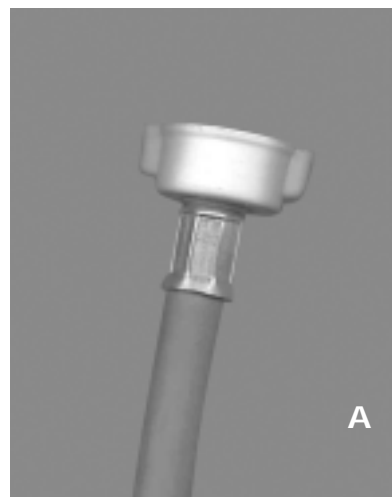

Connect the water drain hose

The draining varies according to model:

External drain hose

1a. Unhook the drain hose from the left clip.

Attention: do not unhook the right drain hose connection.

Internal drain hose

1b. Pull the hose completely out of the holder. The holder can be on the right or on the left on the rear side (depending on the model).
Close off the hole with the attached cap.

2. Connect the drain hose to the siphon or hook it over the edge of a sink by means of the "U" bend supplied.

3. Make sure there are no kinks in the hose.

4. Secure the hose so that it cannot fall down while the appliance is running.

The drain hose should not be hooked onto small washbasins.

If you need to add an extension, use a flexible hose of the same type and secure the union with screw-on hose clips.

Max. drain hose length: 2.50 m

Max. drain height: 1.25 m

Min. drain height: 0.70 m



1a



1b



ELECTRICAL CONNECTION



Do not use extension leads or multi sockets.
Electrical connections must be made in accordance with local regulations.

1) Warning - this appliance must be earthed

This appliance is normally supplied with a mains lead having a plug fitted in the factory which has been checked for correct earth continuity.
 If the fitted plug is not suitable for your socket outlet, or if the machine's mains lead is not fitted with a plug, you should fit a suitable new, good quality plug by following the instructions in (2) below.
 Any unsuitable plug should be cut off and disposed of in order to avoid a possible shock hazard should it be inserted into a socket.

2) CONNECTION TO A REWIRABLE PLUG - to be carried out only by a qualified electrician

The wires in the mains lead are coloured in accordance with the following code:

BLUE - "NEUTRAL" ("N")


BROWN - "LIVE" ("L")

GREEN AND YELLOW - "EARTH" ("E")

To fit a new plug, proceed as follows:

2.1 Polarized Plugs (e.g. 3 pin, 13 amp plug conforming to BS 1363A)

- The GREEN AND YELLOW wire must be connected to the terminal in the plug which is marked with the letter "E" or by the Earth symbol or coloured green and yellow.
- The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured blue.
- The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured brown.

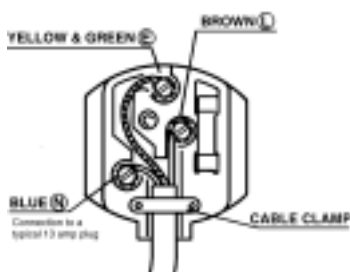

2.2) Non-polarized plugs (e.g. 2 pin with side earth contact)

The wire which is coloured GREEN AND YELLOW must be connected to the earth contact. The other two wires should be connected to the two pins, irrespective of colour.

FUSE REPLACEMENT

If the mains lead of this appliance is fitted with a BS 1363A 13 amp fused plug, replace the fuse only with an A.S.T.A. approved type conforming to BS 1362 and proceed as follows:
 Remove the fuse cover (A) and the fuse (B).

Fit the replacement 13 A fuse into the fuse cover.

Refit both into the plug.

For all other types of plug, the supply socket should be protected by a 16 A fuse or circuit breaker at the distribution board.

